

**DATOS PARA BANCO DE CONDENSADORES 220V TRIFASICO**

KVAR	Consumo I ( A )	Fusible ( A )	Cable ( AWG )	Contactador G.E.	Contactador Camsco
2,5	6,3	16	14	CL00 ( 9 A )	C1-D18
5	13	20	12	CL02 ( 18 A )	C1-D32
7,5	19	32	10	CL03 ( 25 A )	C1-D40
10	25,1	50	10	CL04 ( 32 A )	C1-D50
12,5	31,4	63	8	CL45 ( 40 A )	C1-D65
15	38	63	8	CL45 ( 40 A )	C1-D80
17,5	44	80	6	CL06 ( 50 A )	C1-D95
20	50	100	6	CL07 ( 65 A )	C1-F115
25	63	125	4	CL08 ( 80 A )	C1-F150
30	75,4	150	2	CL09 ( 95 A )	C1-F150
35	88	160	2	CL09 ( 95 A )	C1-F185
40	100	200	2/0	CL10 ( 105 A )	C1-F225

**DATOS PARA BANCO DE CONDENSADORES 440V TRIFASICO**

KVAR	Consumo I ( A )	Fusible ( A )	Cable ( AWG )	Contactador G.E.	Contactador Camsco
5	7	16	14	CL00 ( 9 A )	C1-D18
7,5	10	16	14	CL01 ( 12 A )	C1-D25
10	13	20	12	CL02 ( 18 A )	C1-D32
15	20	40	10	CL03 ( 25 A )	C1-D40
20	26,2	50	10	CL04 ( 32 A )	C1-D50
25	33	63	8	CL45 ( 40 A )	C1-D65
30	39,3	80	6	CL06 ( 50 A )	C1-D80
35	46	100	6	CL06 ( 50 A )	C1-F95
40	52,5	100	4	CL07 ( 65 A )	C1-F115
50	66	125	4	CL08 ( 80 A )	C1-F150
60	79	160	2	CL09 ( 95 A )	C1-F185